



ENCRYPTED PROTECTION



EASY TO INSTALL



ACCESS CREDENTIALS



# Entrematic SVA

## Secure Virtual Access

EN



### ACCESS CREDENTIALS

**Secure Virtual Access (SVA)** is the new Entrematic system to easily manage entrances via Bluetooth.

SVA enables credentials that give users permanent or occasional access, according to configurable time bands and modifiable at any time.

The system includes:

- a **plug-in card** compatible with the accessory slot of the Entrematic control panels (code MOBCRE)
- an **app** for smartphones
- an **access credential system** (codes MOBOK and MOBGK5)



### ENCRYPTED PROTECTION

- SHA-2 is the encryption algorithm used to transmit the data with authenticated certificates
- Bluetooth™ 4.0 protocol
- all transactions are protected by two authentication stages
- the Cloud stores only half access key; the other half is kept on a smartphone
- system used also in the banking security and alarm system fields



# Simple to install and configure

(1) Install the electronic card (MOBCRE) in the accessory slot of the Entrematic control panels or in the card-holding base CONT1



plug-in electronic card compatible with all Entrematic control panels

(2) Download the SCLAK App from the Apple or Google stores



SCLAK application  
iOS 9+ and Android 4.3.1+

(3) Follow the instructions in the App: activate the card and appoint an administrator/owner of the installation. If more access credentials are necessary, Entrematic cards with additional activation codes are available



owner and guest credentials


## Easy to use

### SEVERAL TYPES OF USER

**ADMINISTRATOR:** defined by the installer after activation of the card. Manages the credentials and the Bluetooth (MOBCRE) units: defines the owners, enables/disables Bluetooth units, enables owners to invite guests, receives notifications when an owner invites guests

**OWNER:** controls the automation via Bluetooth smartphone with no limits. The owner credential has no expiry

**GUEST:** invited by the owner to use the system, may have access limitations. The guest key package is valid for one year

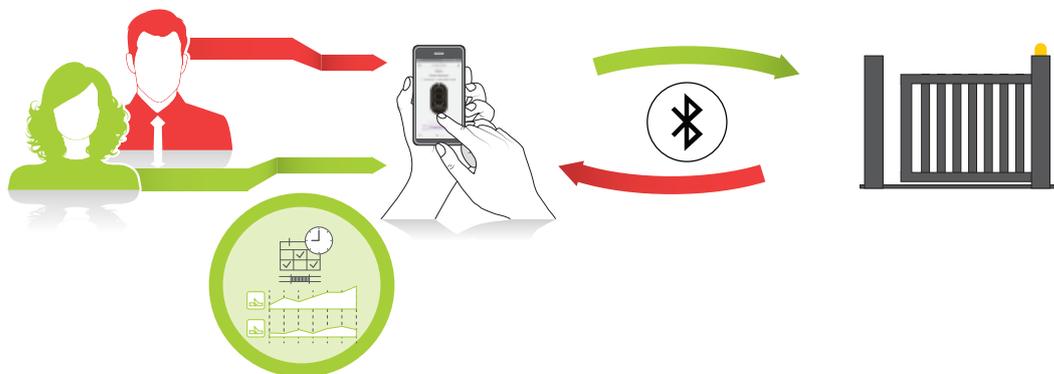

### AUTHORISATION AND ACCESS LIMITATIONS

The owner can configure guest user accesses with complete freedom:

- enables/disables the guest at any time
- defines a date and time bands for access: the owner sets days and times in which the guest can enter, defining check in-out periods or setting daily or weekly routines (e.g. every Wednesday of the month)
- entryphone: the guest can never enter autonomously. The guest will have to ask for permission from the owner every time he wants to enter. The owner will receive a notification with the request. If he accepts the request, the guest will have free access
- just one time: the guest will enter the system only once



**Entrematic Italy S.p.A.**

Largo U. Boccioni, 1 • 21040 Origgio (VA) • Italy

Tel +39 02 963911 • Fax: +39 02 9650314

ditec@entrematic.com

www.ditecentrematic.com • www.entrematic.com

Cod. N218B - 04/2018

Entrematic SVA

gdp milano 175965

Available in: France, Germany, Spain, Turkey and Canada.

For addresses and contact information see our website [www.ditecentrematic.com](http://www.ditecentrematic.com)