

Ditec PWRMI

Ditec

IP2264 • 2026/09/16

Istruzioni dima di posizionamento attuatori per cancelli a battente



Actuator positioning template instructions for swing gates

Instructions du gabarit de positionnement des actionneurs pour portails battants

Anweisungen für die Positionierungsschablone der Antriebe für Drehtore

Instrucciones de la plantilla de posicionamiento de los actuadores para puertas batientes

Instruções do gabarito de posicionamento dos atuadores para portões de batente

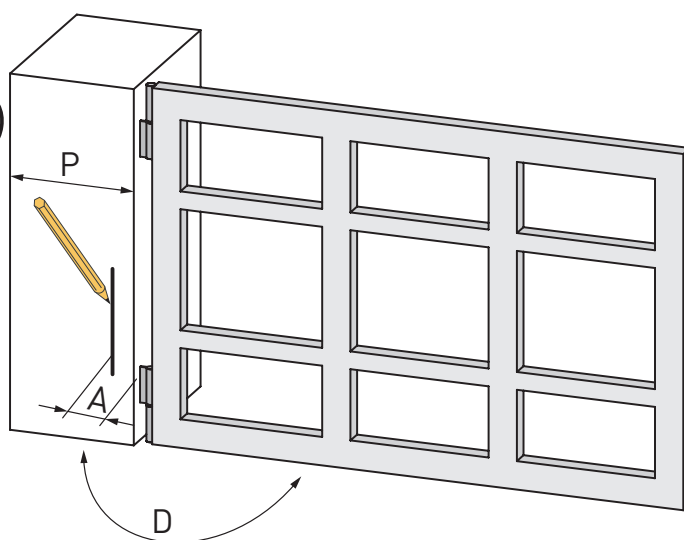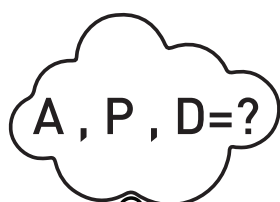

Vedi manuale
tecnico IP2250





See technical
manual IP2250

Voir le manuel
technique IP2250


Siehe technisches
Handbuch IP2250

Consulte el manual
técnico IP2250


Consulte o manual
técnico IP2250

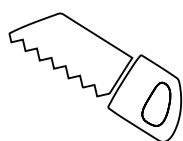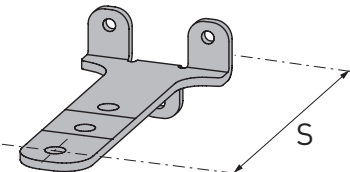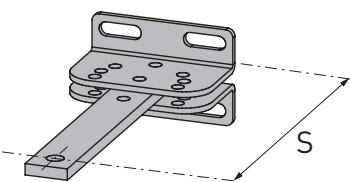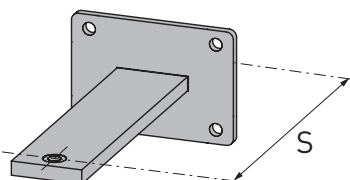


Tagliare / Cortar
Schneiden / Cut
Couper / Cortar

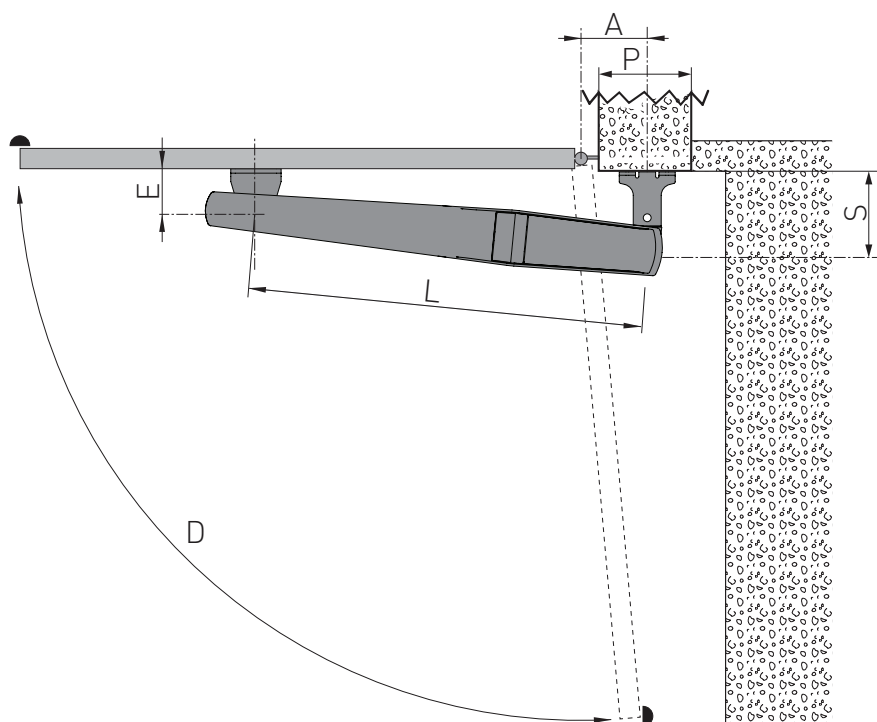


PWR25H

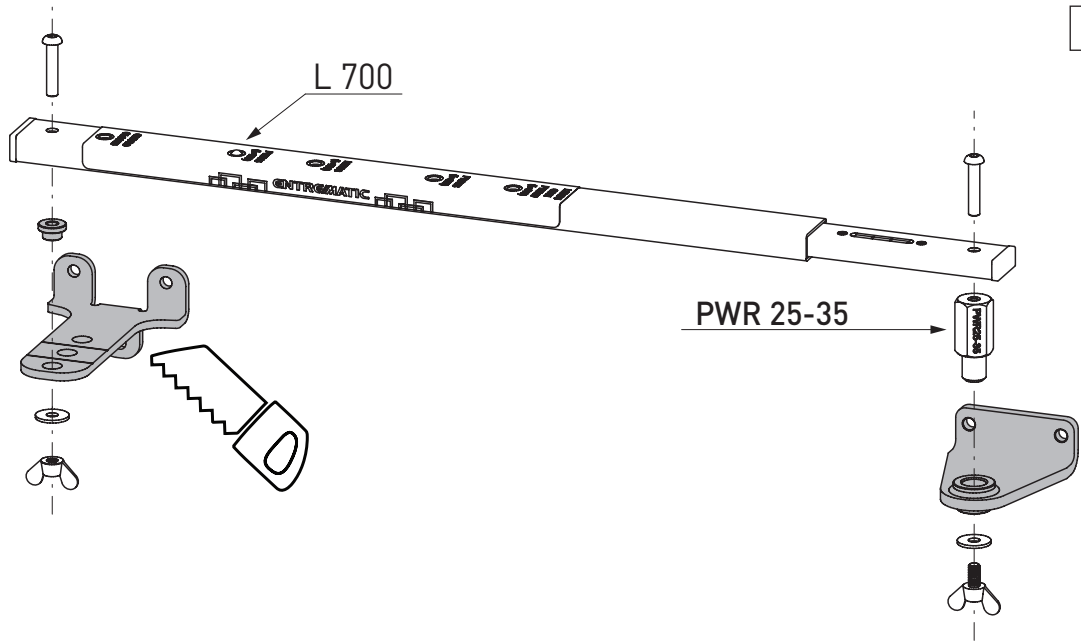


PWR35H

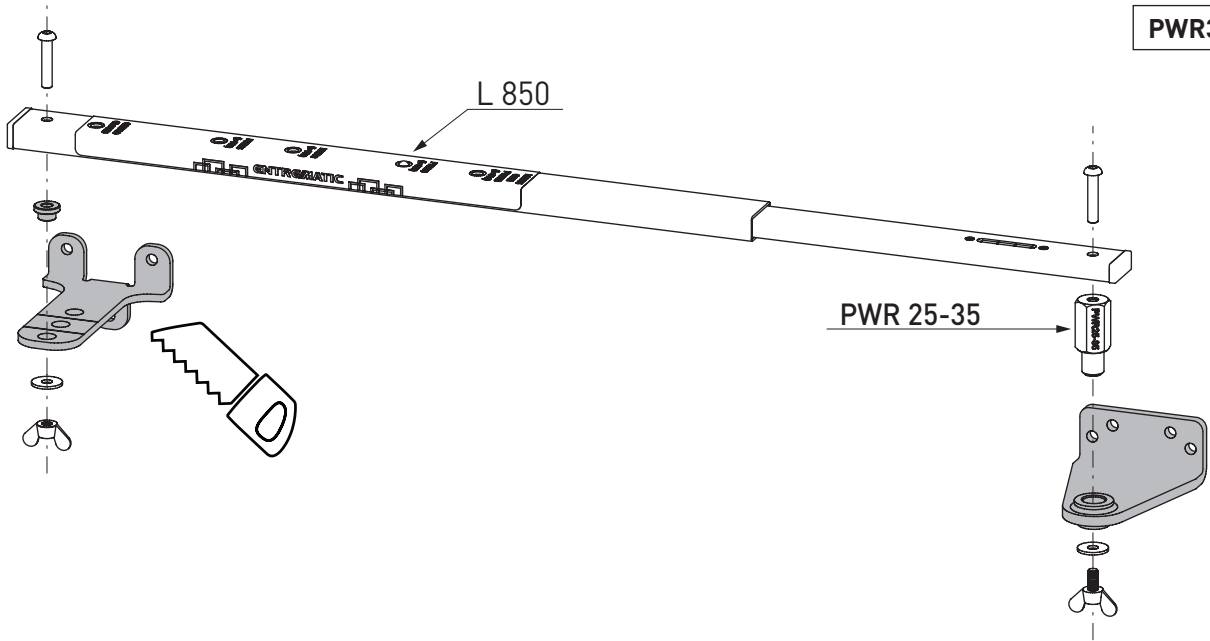


PWR40/50

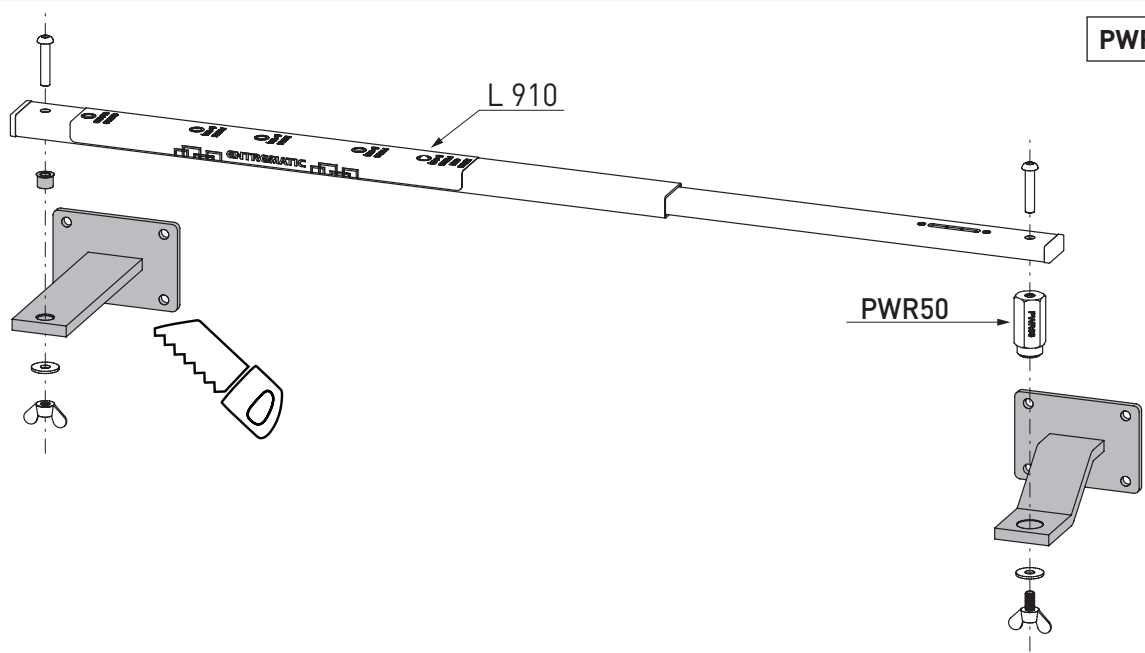

LUX03

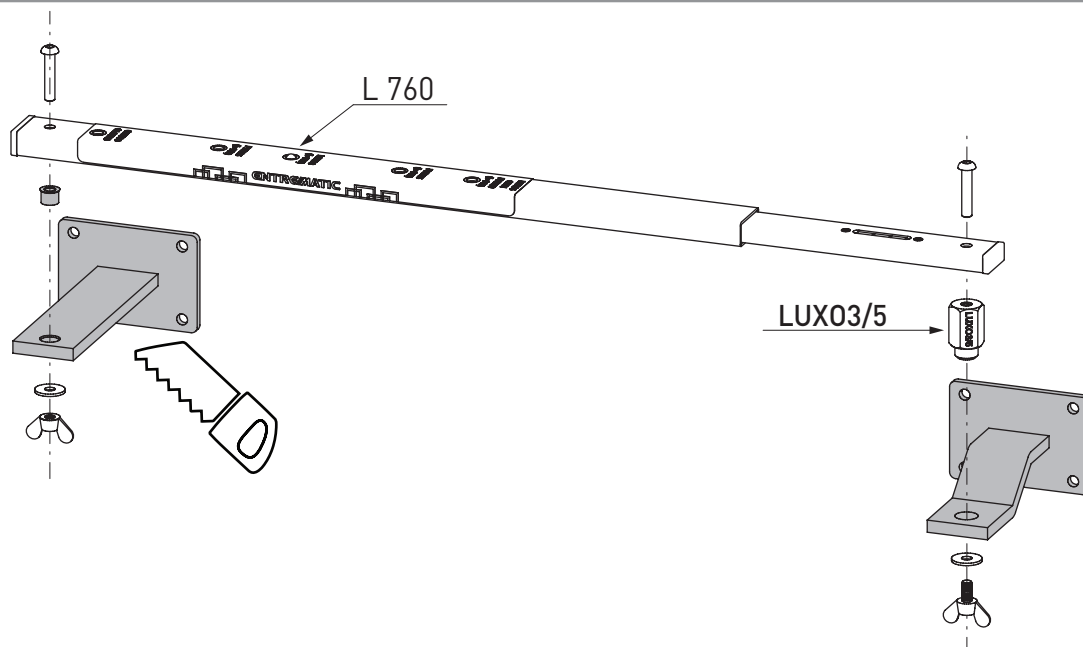

LUX05

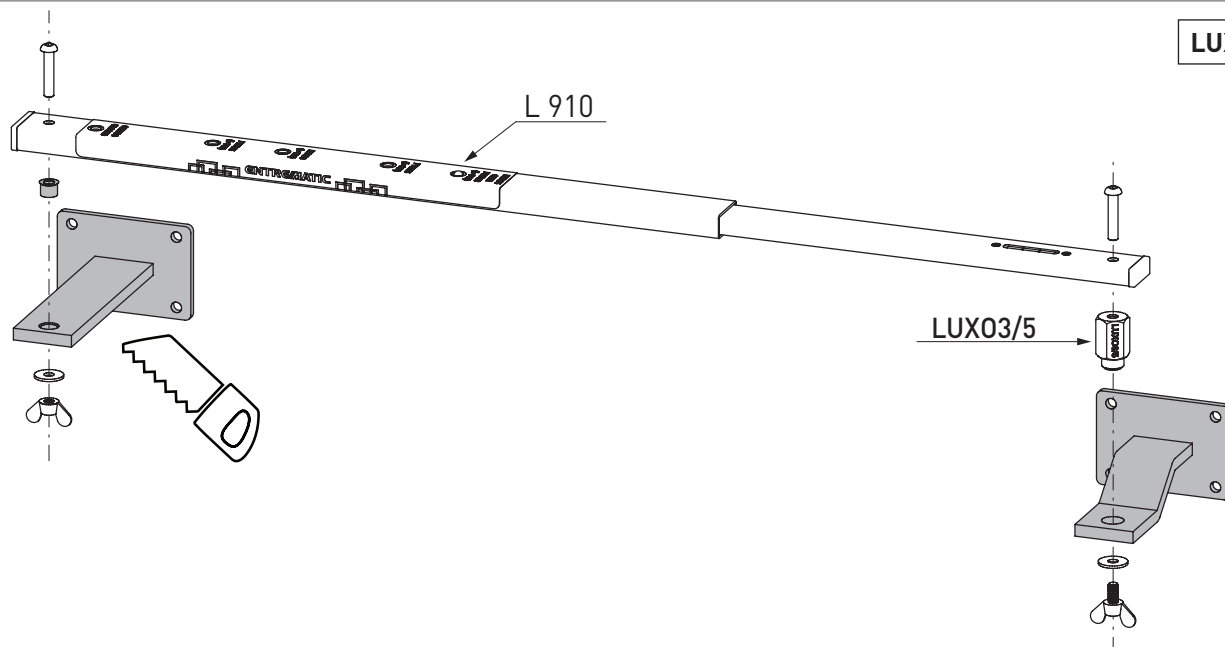

OBBI

